



Installation Instructions

WP022

Winch Plate for


Heavy Duty Pipe Front Bumpers



Step

1. Line the winch plate with the holes located at the bottom of the bumper. Make sure the winch plate has the tread-plate facing up.
2. Install the winch plate using hardware provided. Tighten all bolts to 70 lbs. of torque.
3. Enjoy your new winch! Send us pictures of your truck with our equipment and it could end up on the website! Email your pictures to: Service@AmericanBuiltEQ.com.

Hardware Provided:

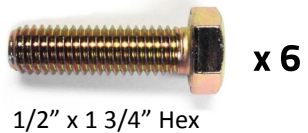

x 6

1/2" x 1 3/4" Hex



x 12

1/2" Washer



x 6

1/2" Hex Nut



x 6

1/2" Lock Washer

